

DAB+ Digital Radio Speaker
DAB+ Wireless+ MP3+ FM Radio

USER GUIDE



DAB-H6

Introduction:

The device is a home-use all-in-one wireless DAB/DAB+ digital radio speaker, which integrates DAB, wireless, FM, Mp3 player, Aux .It made of wooden case to provide better sound quality.

Safety warning :

- Read and understand all safety guide warning item.
- Please use charging equipment that can supply 5V/1A of output voltage to avoid damage to the equipment
- The product built-in li-ion battery, please put OFF the switch when it's not in use long time
- It's not allowed to make the product suffer from rain or damp, not spill any liquid on the product
- It's not allowed to make the product close to high temperature heat source, or blow the product at high temperature
- It is not allowed to make the product fall or suffer from thump or apply great pressure on the product

When the battery is too low, there maybe intermittent sound and restarting repeated.
Please turn down the volume


Packing List

- Main uint: 1 pcs
- Micro USB charging line: 1 pcs
- AUX line: 1 pcs
- User guide: 1 pcs


Function description

- Process material: wooden & ABS
- DAB/DAB+ range: BANDIII 170~240MHz
- Wireless audio receiver (V4.2),wireless Name : H6
- Wireless hands-free
- FM radio receiver (87.5-108MHz), Antenna length 35cm
- USB/TF card Mp3 player
- AUX-in
- Support 10 FM stations and 10 DAB stations presetting
- Support two alarm setting
- Need DC 5V 1A charging , 3.7V 2000mAh li-ion battery inside
- Clock setting, alarm setting
- LCD 128*64 display
- Speaker unit size : 57mm*57mm, 4Ω 5W
- Subwoofer unit size : ϕ52mm
- Output power : RMS 5.0W (THD+N= 10%, f0= 1KHz)
- SNR: ≥ 70dBA
- SIZE : 140mm*105mm*88mm
- Net weight : 0.49kg

Main structure

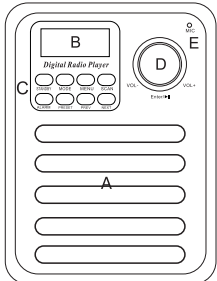

A:Speaker B:Display C: Button
D:Knob E: Mic

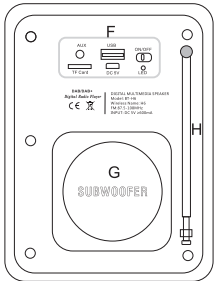

F: Interface H: telescopic antenna
G:Subwoofer

Button & konb operation:

1. **STANDBY:** Long press into standby mode, short press to wake up
2. **MODE:** Mode switch: DAB/BT/FM/USB/TF/AUX
3. **MENU:** Short or long press enter menu setup or display channel information.
4. **SCAN:** In DAB/FM mode, search all radio channel;
5. **ALARM:** Setting alarm time and alarm ON/OFF
6. **Preset:** Preset your favorite channel
7. **PREV :** Previous song/channel, selecting in menu
8. **NEXT:** Next song/channel,selecting in menu
9. **KNOB:** Turn the volume up/down. Press to play / pause, answer / hang up calling, confirm the select
10. **MIC:** Hands-free microphone

Interface

- AUX: 3.5mm
- TF Card: TF card socket
- USB: U disk socket
- DC 5V: Micro USB charging port
- ON/OFF: Power switch
- LED: Charging light

How to use :

Charging:

The attached usb cable is used for charging the inside li-ion battery, Micro usb end is connected to the "DC 5V" slot of the speaker, USB end is connected to AC/DC adapter(5V 1A), after charge is stared, the LED lamp will display, the LED lamp go out when the product is fully charged. Usually it need 4 to 6 hours to charging enough .

First time using this product, at least 4 hours of charging

Power ON:

Put switch to "ON", press "Standby" to wake up, Press "Mode" enter the mode you want to playing such as: DAB/FM/BT/USB/TF/AUX,

DAB mode

In DAB mode, press "SCAN" to search and save all DAB stations, operation Pre/next and knob to change station and volume. press "menu" to check DAB information, It can adjust the length and direction of the antenna to get better receive effects

Menu Setting

Long-press "menu " into menu setting, you can setup system time/clock show time/contrast/ factory reset/scan mode/, turn or press knob to select and confirm

Bluetooth mode:

In Bluetooth mode, mobile phone search bluetooth name"H6"to pairing. Then operation previous / next , knob to control the song playing and adjust the volume. Press the knob to answer / hang up the calling, Long press to hang up, double press to recall the last calling.

FM radio mode

In "FM" mode, press SCAN to search and save all radio channels, Short-press previous/next to change the saved channels, press "menu"to check FM information, you can also adjust Frequency 0.1 step when tune mode is tune step . It can adjust the length and direction of the antenna to get better reception effect.

USB / TF Mode

In USB or TF card mode, start to playing MP3 files, operation previous/next, play/ pause to control playing. If U disk and TF card both are inserted , later plug is played first, you can switch the mode which you want. support memory 32G.

AUX mode

External audio source input to 3.5mm port. control the volume with knob

Preset setting

In DAB or FM mode, long-press "Preset " to preset the playing station as a favorite channel, you can set 10 FM stations and 10 DAB stations. short-press "preset" into preset station list

Alarm setting

In any mode, press "Alarm"to set alarm time/alarm mode/alarm volume/alarm ON/OFF, you can set two alarm

Troubleshooting

1. **Charging LED is not light.**
Check the charging wire or the power adapter .
2. **Charging LED is flashing**
the volume is too loudly or the adapter power is not enough, please turn the volume down
3. **Automatic shutdown, or automatic restart**
Battery is low, please charge in time
4. **Poor DAB or FM receiving effects**
Adjust the length and direction of the antenna to get better reception effect
5. **U disk / TF card plays not smooth, or automatically jump out**
USB disk / TF card is bad quality, please replace
6. **AUX has no sound**
If not into AUX mode automatically after insert the AUX line ,Please switch manually, It's best to use the original AUX line
7. **When the speaker is at maximum volume, there is a buzzing sound**
The original audio file is too loud to overload the speaker's maximum power. Please turn down the volume appropriately.
8. **Play with poor sound quality**
Playing audio source quality is bad, try to select audio source with a code rate above 128 Kbps
9. **The voice heard by caller is too small when hand-free**
It's too far from the MIC. Please stay within 30cm to the MIC.

