# Vehicle digital radio stereo system

DAB Radio/FM Radio/Bluetooth/TF card & USB disk MP3



MODEL: DR-9

# **INSTRUCTION MANUAL**



# **BEFORE USE**

- To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe Warning and Caution in this manual.
- Please keep the manual in a safe and accessible place for future reference.

### **▲** Warning

Do not operate any function that takes your attention away from safe driving.

# **▲** Caution

# Volume setting:

- Adjust the volume so that you can hear sounds outside the car to prevent accidents.
- Lower the volume before playing digital sources to avoid damaging the speakers by the sudden increase of

USB disk or TF card

TF card \*

How to control

[►II ]to play/pause songs

[ INT] to preview all songs

[RPT] to repeat single song

[RDM] to random play in list

[I◄◄ / ▶►I.]to previous/next songs

[-10] to play previous 10 song in list

[+10] to play next 10 song in list

- Avoid using the external device if it might hinder safe driving.
- Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded
- · Never put or leave any metallic objects (such as coins or metal tools) inside the unit to prevent a short



### **BASICS**


# Faceplate 19. 5. 6. 9. 10. 11. 12. 13. 14. 15. 16

- 1. Power turn ON/OFF, Mode selected, Hang up
- 2. Station or track previous
- 3. DAB/FM full scan. FM band selected, call answer
- 4. Mute ON/OFF
- 5. Clock show, clock setting 6. Stations or track next
- 7. Volume adjust, EQ/Balance setup
- 8. Microphone
- 9. Preset address 1, Play/Pause
- 10. Preset address 2, songs preview play

### 11. Preset address 3, single repeat

- 12. Preset address 4, random play 13. preset address 5, playing -10 in list
- 14. preset address 6, playing + 10 in list
- 15. System reset
- 16. Auxiliary input jack
- 17. USB disk input
- 18. USB charge to mobile-phone (not for USB disk)
- 19. Micro-SD(TF card) input

### WIRING CONNECTION

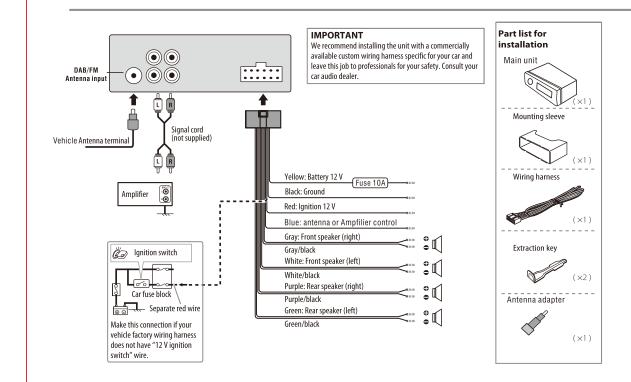

### **GETTING STARTED**

# Turn ON/OFF the radio

1 When the radio is OFF, press MOD (). to power ON 2 When the radio is ON, press and hold MOD . to power OFF

# 2 Set the clock

- 1 Press and hold [CLK], the hour number is flash, turn knob adjust the number, press knob to confirm. then minute number is flash, turn knob to adjust the number, press knob to vonfirm
- clock time date in DAB signal

# 2 Set preset FM stations

**FM RADIO** 

2 When the DAB is work, the clock time will automatically set using the 1 When search all FM stations, the stations automatically stored to the preset address (1-6 number), there is 3 bands 18 addresses in total, each band can store 6 addresses.

Scan the FM radio stations

1 In FM mode, press and hold [BAND] to search all FM stations

2 In FM mode, press[I◄◄ / ►► ] to search previous or next FM station

3 In FM mode, press and hold [I→ / ▶ I]. screen display "manual" enter

manual search mode, turn knob scan by 0.05MHz step, it will return to

the auto scan mode after a few seconds without any operation, screen

2 When the playing station is not a preset station, press and hold 1-6 number to store.

# 3 Preset stations recall

In FM mode. press [BAND] to select F1/F2/F3 bands, press[1-6 number] to select the stored preset stations

### **DAB RADIO**

# Scan the DAB radio stations

- 1 In DAB mode, press and hold [BAND] to search all DAB stations, the screen display "SCAN: 00", "SCAN" is flash in searching, when finished searching, screen display "TOTAL: number".
- 2 In DAB mode, press[I◄◄ / ▶►I] to select previous or next stations 3 Usually the screen display the DAB station name such as "BBC NEWS". press [BAND] to check station number and total number "CH01/34"
- 4 Screen display "NO STA" it mean no DAB stations have been searched screen display "NO SER" it mean the playing station signal is too weak

# 2 Set preset DAB stations

3 Preset stations recall

When the playing station is not a preset station, press and hold 1-6 number to store as a new preset station, if the number have been stored

In DAB mode. press[1-6 number] to select the stored preset stations.

if the number have not been stored any station, screen display "PRE N/A"

**BLUETOOTH** 

# Connect to the smart phone

In any mode, use smart phone bluetooth to search "DAB-CAR" to connect

In BT mode. when use smart phone play music, screen display "BT PLAY" you can operate[ ◄◄ / ▶► ] [ ▶ | ] to previous/next/pause, screen will display "BT PREV" "BT NEXT" "BT PAUSE"

# 2 Bluetooth calling hands-free

1 In any mode, when use the phone calling, screen will display "CALL IN,

# Start playback

USB disk

NOTE: If you want to remove the TF card, please stop playing and switch to other mode, otherwise the unit will crash need to reset.

The source changes automatically and playback start when insert

2 When calling, press [ ← ] to answer, press[ ← ] to hang up.

# 3 Bluetooth streaming playback

### USB disk/TF card playback

5V/1A

Charger to mobile-phone

### Use a portable audio player



Press [MOD  $\circlearrowleft$  ] repeatedly to select AUX, turn on the portable audio player or smart phone and start playback



AUX

se a 3-core plug head stereo mini plug for optimum audio

### **AUDIO SETTINGS**

### MUTE ON/OFF

Press[ MUTE] to turn on/off mute

# FADER AND BALANCE SETTING

Press[KNOB] screen display "BAL" turn knob to adjust the left and right speaker Press [KNOB] repeatedly screen display"FAD", turn knob to adjust the front and

Press [KNOB] repeatedly screen display"EQ",turn knob to adjust the EQ mode

"ROCK/CLASSIC/POP/OFF will be selected

### **TROUBLESHOOTING**

unknown reason reset the unit

rear speaker output balance, "R07----F07"

Press [KNOB] repeatedly screen display"LOUD", turn knob to turn on/off the

### Screen no display Check whether the wiring harness is connected or button not lighter

**Sound cannot be heard** Adjust the volume to the optimum level Check the cords and connections Radio reception is poor Connect the antenna firmly

### FM static noise Can not read U-disk The U-disk or TF card is damaged, please replace it or TF card

Can not read the music The music file format is not support by this unit file in U-Disk or TF card It only support forms file in specification Insert U-disk or TF card The music file in storage is too much, need some screen not display time to read

Antenna connector don't Use a antenna connector adapter commercially match your car available Your vehicle power supply Use a power converter commercially available convert your vehicle power supply to 12V

Crash caused by some Please poke the reset hole with a slender object,

- Keep all cables away from heat dissipate metal parts. After the unit is installed, check whether the brake lamps, blinkers,
- then replace the old fuse with one that has the same rating.

- Install the unit to your car.

chassis or Ground wire (black) to prevent a short circuit. Insulate unconnected wires with vinvl tape to prevent a short circuit. · Be sure to ground this unit to the car's chassis again after installation.

- Do not connect the  $\bigcirc$  wires of speakers to the car chassis or Ground wire
- If your vehicle wiring harness does not have the ignition terminal, connect Ignition wire (red) to the terminal on the vehicle's fuse box
- wipers, etc. on the car are working properly.

### Remove the key from the ignition switch, then

- Connect the wires properly. See Wiring connection.
- 4 Connect the ⊖ terminal of the car battery.

Installing the unit (in-dash mounting)

For safety's sake, leave wiring and mounting to professionals. Consult

as the heat sink and enclosure become hot.

- maximum power of the speakers is lower than 25W, change the speakers Mount the unit at an angle of less than 30°.
- which provides 12 V DC power supply and is turned on and off by the
- If the fuse blows, first make sure the wires are not touching car's chassis,
- disconnect the ⊖ terminal of the car battery.
- See Installing the unit (in-dash mounting)


### The unit can only be used with a 12 V DC power supply, negative ground Disconnect the battery's negative terminal before wiring and mounting. Do not connect Battery wire (yellow) and Ignition wire (red) to the car


A Caution

the car audio dealer. Install this unit in the console of your vehicle. Do not touch the metal parts of this unit during and shortly after use of the unit. Metal parts such

- (black), or connect them in parallel. Connect speakers with a maximum power of more than 25 W. If the

# Basic procedure

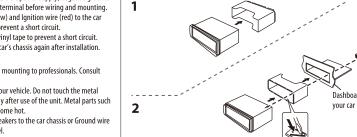

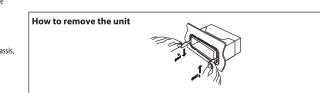

Bend the appropriate tabs to

hold the sleeve firmly in place

# **SPECIFICATIONS**

Bluetooth version

Bluetooth Name

FM Frequency Range 87.5 MHz --- 108.0 MHz (50 kHz step) Frequency Response (±3 dB) Usable Sensitivity (S/N = 26 dB) 8.2 dBf (0.71 μV/75 Ω) Quieting Sensitivity (DIN S/N = 46 dB) 17.2 dBf (2.0  $\mu$ V/75  $\Omega$ ) Signal-to-Noise Ratio (MONO) 64 dB 40 dB Frequency Range BAND III: 170-240MHZ 5A-13F Stations address USB 1.1. USB 2.0 (Full speed) USB Standard Compatible Devices Mass storage class DC 5 V ==== 1 A Maximum Supply Current Micro-SD/TF card speed MP3/WAV/APE/FLAC Decode format \*Only support some forms in these package FAT16/32.exFAT/FAT64 File system

BT4.2 Ver

DAB-CAR

 $25W \times 4$ 2 500 mV/10 k0 < 600 Ω Preout Impedance Operating Voltage Maximum Current Consumption −10°C — +60°C Installation Size  $(W \times H \times D)$ 182\*53\*80mm

20 Hz --- 20 kHz

1 000 mV

Subject to change without notice.

